


Microjet Recorder (Type: PHC)

Proper setting procedure of recording paper and recording head (1 to 23)

Loosen both ends of the recording papers thoroughly. (1 to 4)



Remove the chart case from the main unit. (5, 6)

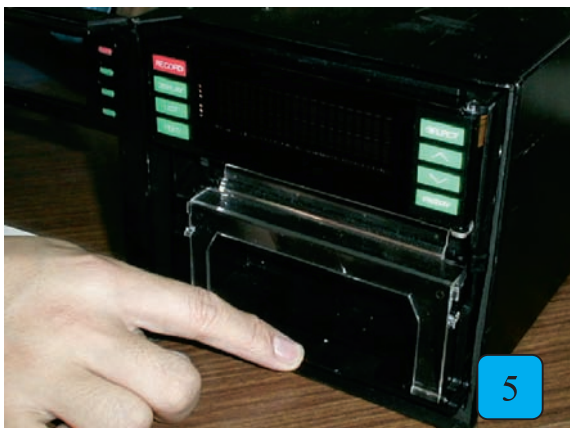

Setting the recording paper (7 to 14)

Turn the chart cover in the direction **UP**, indicated by the arrow and open the cover.



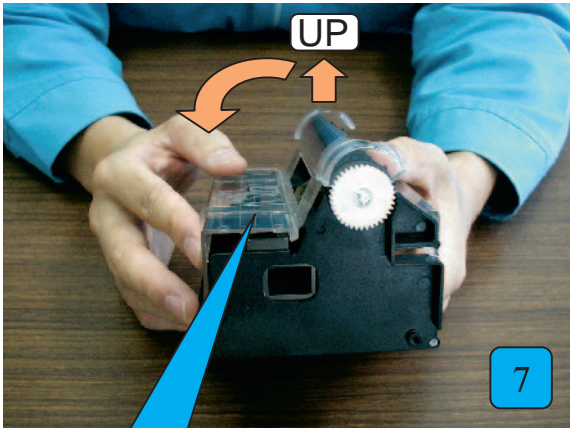


Chart cover

Set the recording paper roll vertically in the chart case as illustrated.
(Note: Do not set the recording paper roll horizontally.)

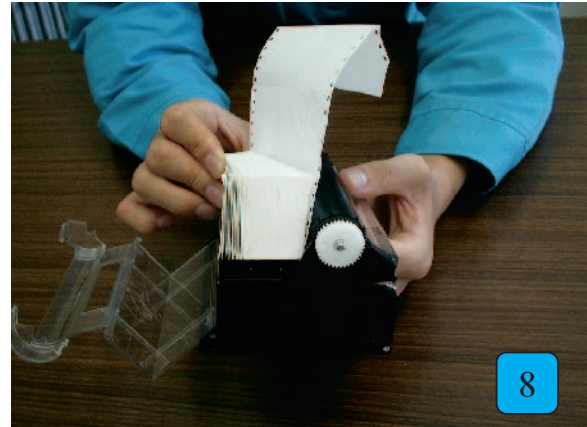

Open the chart guide.
Align the core of the recording paper roll with the pin.

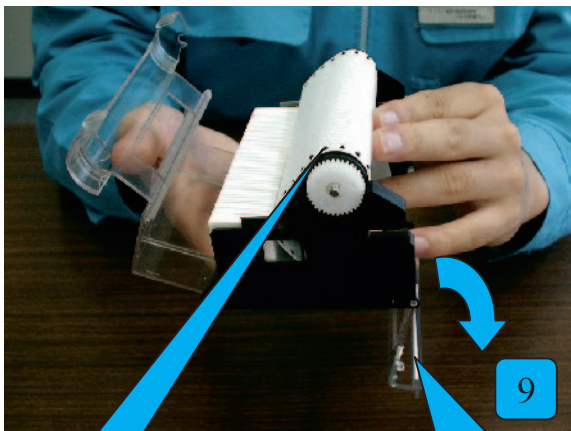

Pin

Chart cover

Close the chart cover.

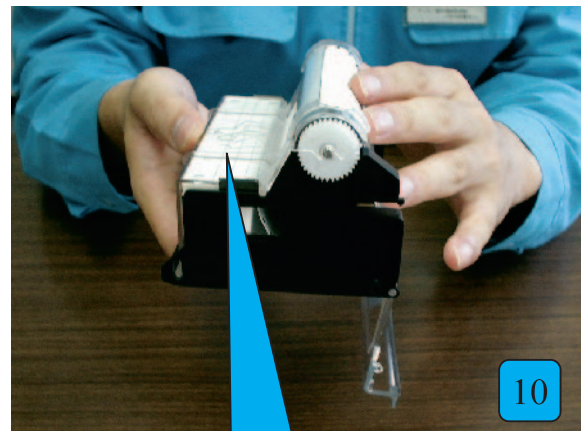



Chart cover

Close the chart guide.



Chart guide

Make sure that the recording paper is not caught as shown in No.13.

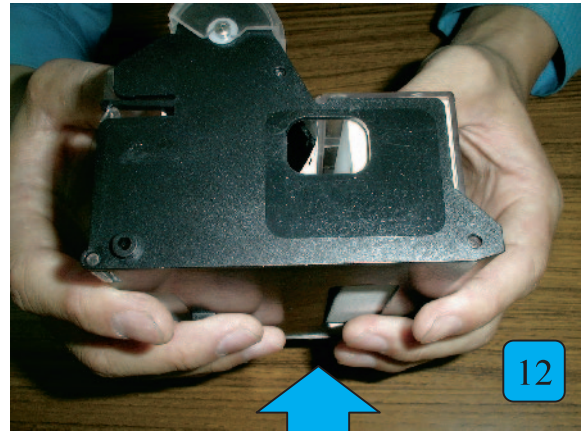


Caution when setting a chart paper

Chart cover



If the paper is caught in the chart cover, paper jam may result.

Align the recording paper along the side provided with short holes.

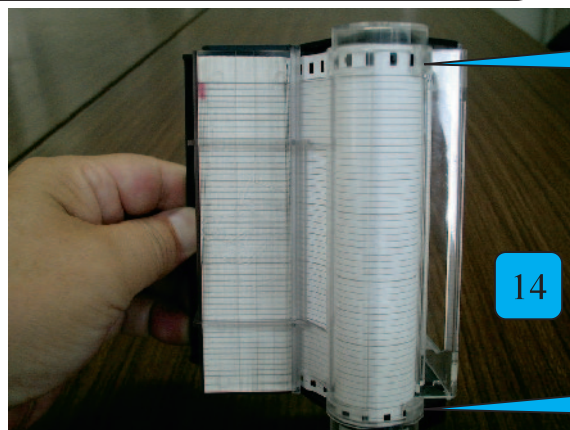


Side provided with long holes.

Side provided with short holes.


Preparing the recording head (15 to 18)




Pull the cap to the top.

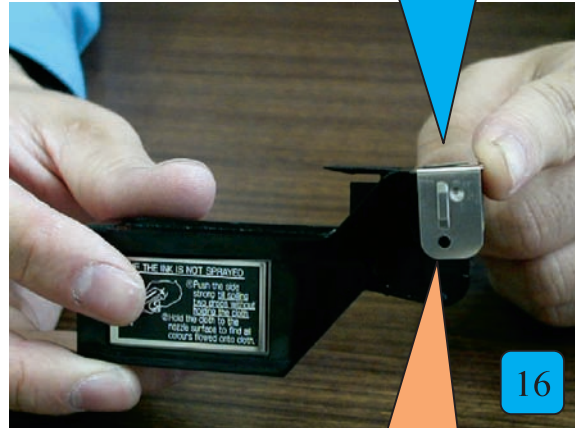

Make sure that the bottom face in **15** is now placed on the top.

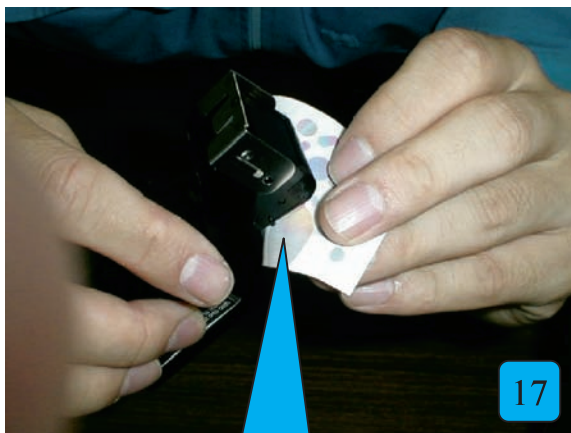

Press the attached cloth firmly onto the recording head.

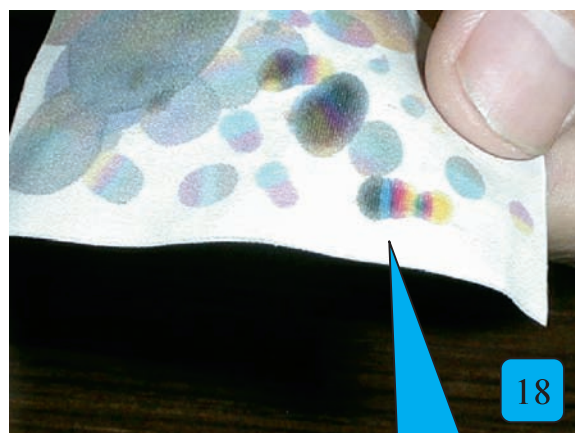


Check if all colors of ink adhere to the cloth.

Type PHZH1302: 3 colors
(Red, Blue, and Black)


Type PHZH1002: 4 colors
(Yellow, Red, Blue, and Black)

Setting recording head and chart case to the main unit (19 to 23)


Push the recording head securely.

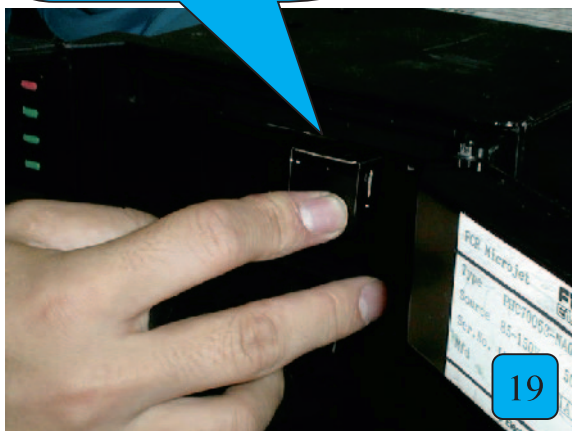

Set the chart case into the main unit.

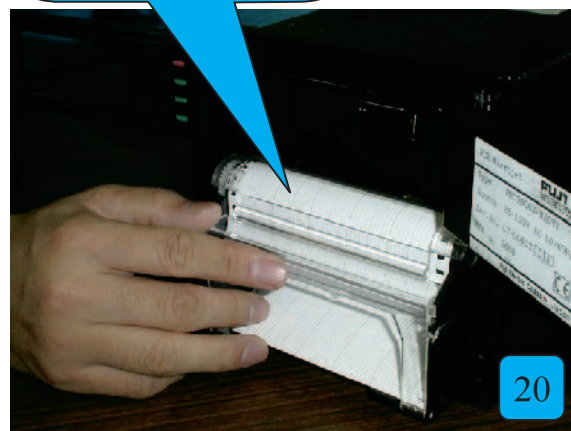

Push it securely.

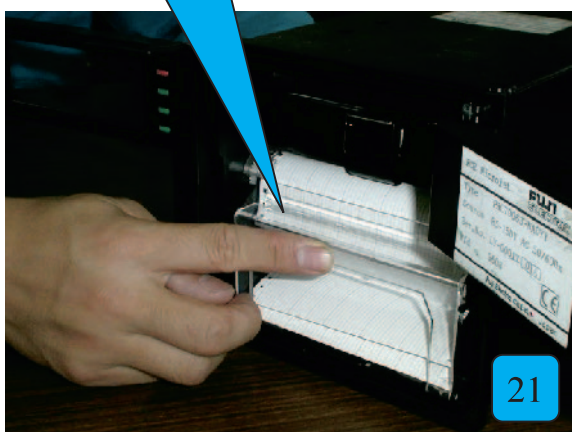

Feed the recording paper by the FEED key.



Press the FEED key to feed out 2 to 3 folds of the paper.



The recording paper and the recording head are now all set.