

Software Update Guide for [FSC]

1. Application

This guide is applied to the software update of PORTABLE TYPE ULTRASONIC FLOWMETER
[Type: FSC].

2. Operating suggestions

- 1) Supply power through AC power supply adapter. This equipment recognizes power supply through AC power supply adapter when update is executed.
- 2) Do not cut power off during update. This equipment will not able to start up.
- 3) Do not insert or remove a SD memory card during update.
- 4) Failure of software update by wrong operation may cause abnormal performance on this equipment.

3. Required items


- 1) Please download an update file from our homepage.

The file is a compressed file. Please uncompress it.

Two update files (FSC_SYSM.bin, FSC_SPDM.bin) are uncompressed.

- 2) Prepare a SD memory card which contains the update file.

Create the " UPDATE" folder directly beneath the root of SD memory card and store the uncompressed two update files directly beneath that folder.

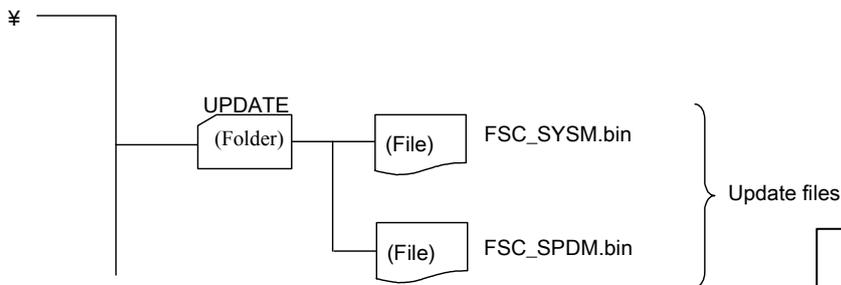

SD memory card icon

4. Update procedure

- 1) Insert a SD memory card into the SD memory card slot.
- 2) Turn the power on by press the [ON] switch on the main unit.
Check if a SD card memory has been recognized by the SD card memory card icon on the measurement screen.

SD memory card icon




: Recognized




: Unrecognized

Insert a SD memory card

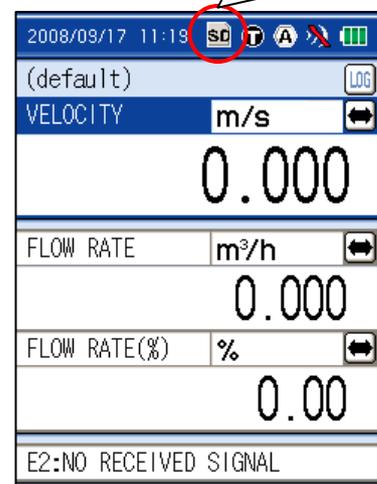


Measurement screen

3) Press [MENU] key to display the Menu screen.

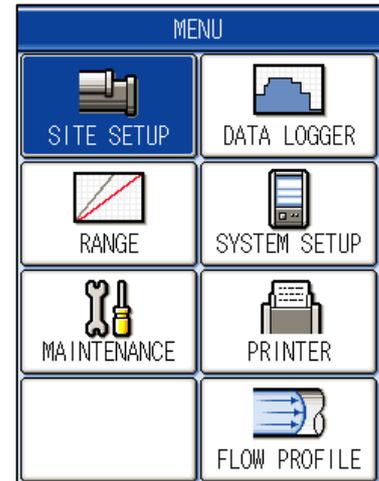


MENU screen

4) Move the cursor to [MAINTENANCE] on the MENU screen, and press [ENT] key to display the MAINTENANCE screen.

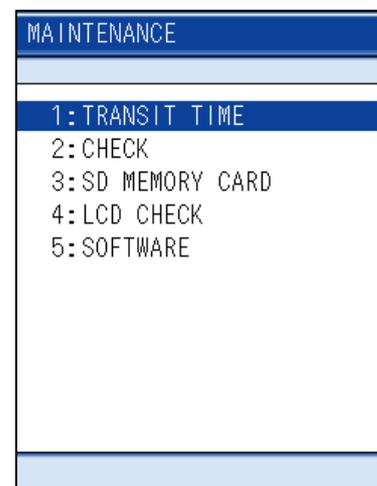

MAINTENANCE screen

5) Move the cursor to the [5: SOFTWARE] on the MENU screen, and press [ENT] key to display the SOFTWARE screen.

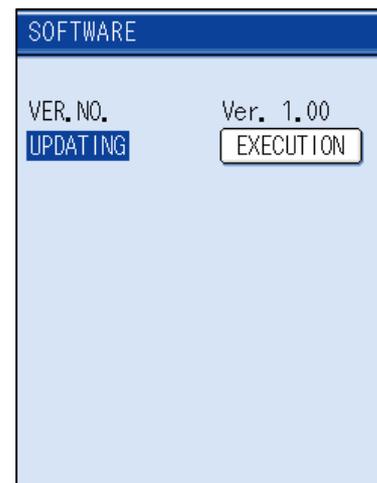

SOFTWARE screen

-VER. NO.:


Display the software version.

Displayed version on the right is an example.

-UPDATING:

Software update is available.

- 6) Press [ENT] key twice on the SOFTWARE screen to display a message.

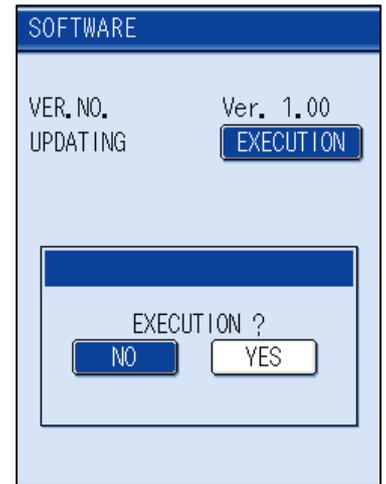


Update select screen

- 7) Select [YES] by [◀] [▶] keys and press [ENT] key.
Update starts.
Automatically restart after update completes.
It takes approximately 30 seconds for update.



Update execution screen

- 8) After restart, confirm the version on the SOFTWARE screen.
Confirm that the version has been changed.

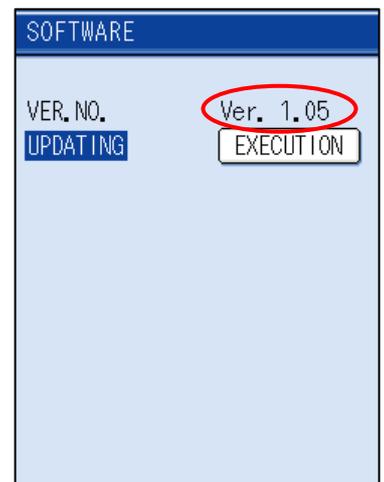

SOFTWARE screen

- 9) Press and hold [OFF] switch on the main unit for three seconds or more to turn the power off, and remove a SD memory card.
Now, update procedure completed.