



NOTE:

* THIS DIAGRAM IS PROVIDED FOR REFERENCE USE ONLY AND
SHOWS THE MOST COMMON CONNECTIONS UTILIZED FOR
TYPICAL APPLICATIONS. FOR DETAILED SPECIFICATIONS AND
ADDITIONAL INFORMATION PLEASE SEE THE FRENIC-MEGA
DRIVE INSTRUCTION MANUAL AND USER'S MANUAL.